

HỆ KHUNG TRẦN CHÌM Concealed Ceiling System


MONO KHUNG TRẦN CHÌM PHỔ THÔNG Standard Concealed Ceiling System




PARA KHUNG TRẦN CHÌM CAO CẤP Advanced Concealed Ceiling System



GAMMA KHUNG TRẦN CHÌM CAO CẤP Advanced Concealed Ceiling System

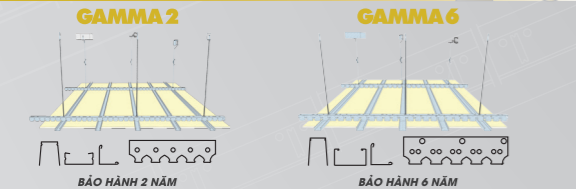


SUPER KHUNG TRẦN CHÌM CAO CẤP Advanced Concealed Ceiling System

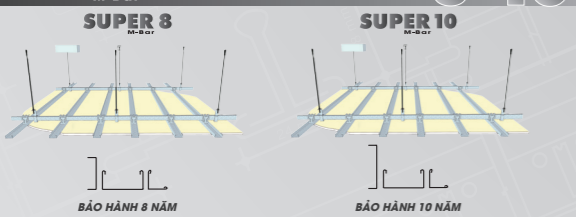


HỆ KHUNG TRẦN NỔI Exposed Ceiling System


ALPHA KHUNG TRẦN NỔI Exposed Ceiling System

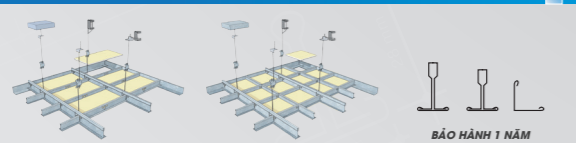

MEGA KHUNG TRẦN NỔI Mega Exposed Ceiling System

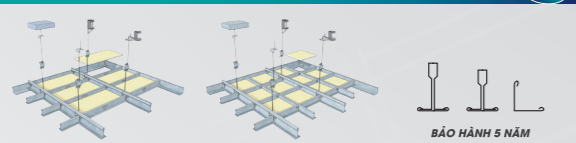

OMEGA KHUNG TRẦN NỔI SÓC ĐEN Tee System with Black Reveal

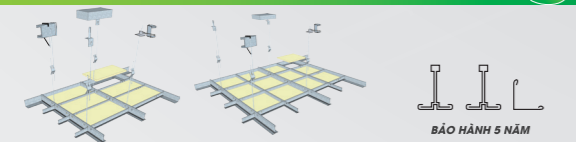

HỆ KHUNG VÁCH Drywall System


PARTI KHUNG VÁCH NGĂN PHỔ THÔNG Standard Drywall System



PARTI+ KHUNG VÁCH NGĂN CAO CẤP Advanced Drywall System



PARTI MAX KHUNG VÁCH NGĂN CAO CẤP Advanced Drywall System

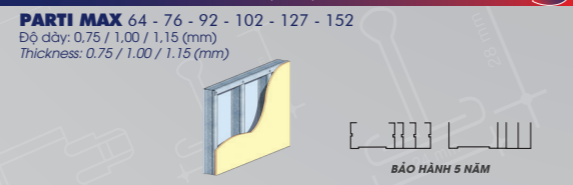

TẤM TRẦN Ceiling Board

GYP ART TẤM THẠCH CAO MỸ THUẬT GypArt Board




DOMINO TRẦN KIM LOẠI Metal Ceiling




PHỤ KIỆN AAA Accessories

AAA CỬA THÂM TRẦN Access Panel

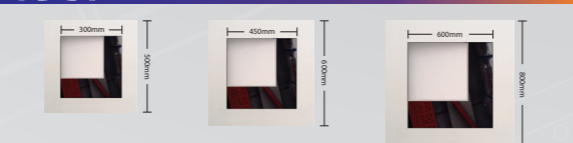


AAA BĂNG KEO LƯỚI Fiberglass Tape

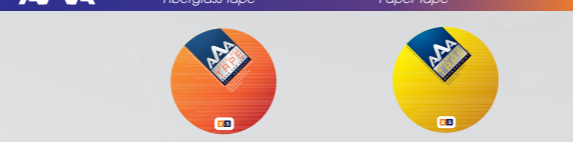

NHÀ MÁY SẢN XUẤT KHUNG TRẦN VÀ KHUNG VÁCH MANUFACTURER OF CEILING AND DRYWALL STEEL FRAME



KHUNG TRẦN CHÌM CAO CẤP PARA 3 Advanced Concealed Ceiling System

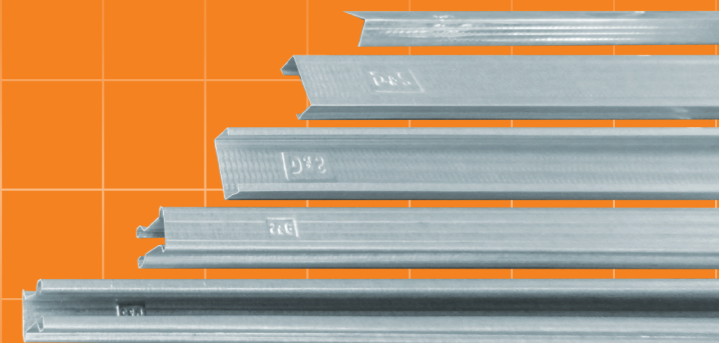


D & S CORPORATION
CÔNG TY CỔ PHẦN D&S

Chất Lượng
& AN TOÀN
Quality and Safety



CHI TIẾT KỸ THUẬT / DETAIL

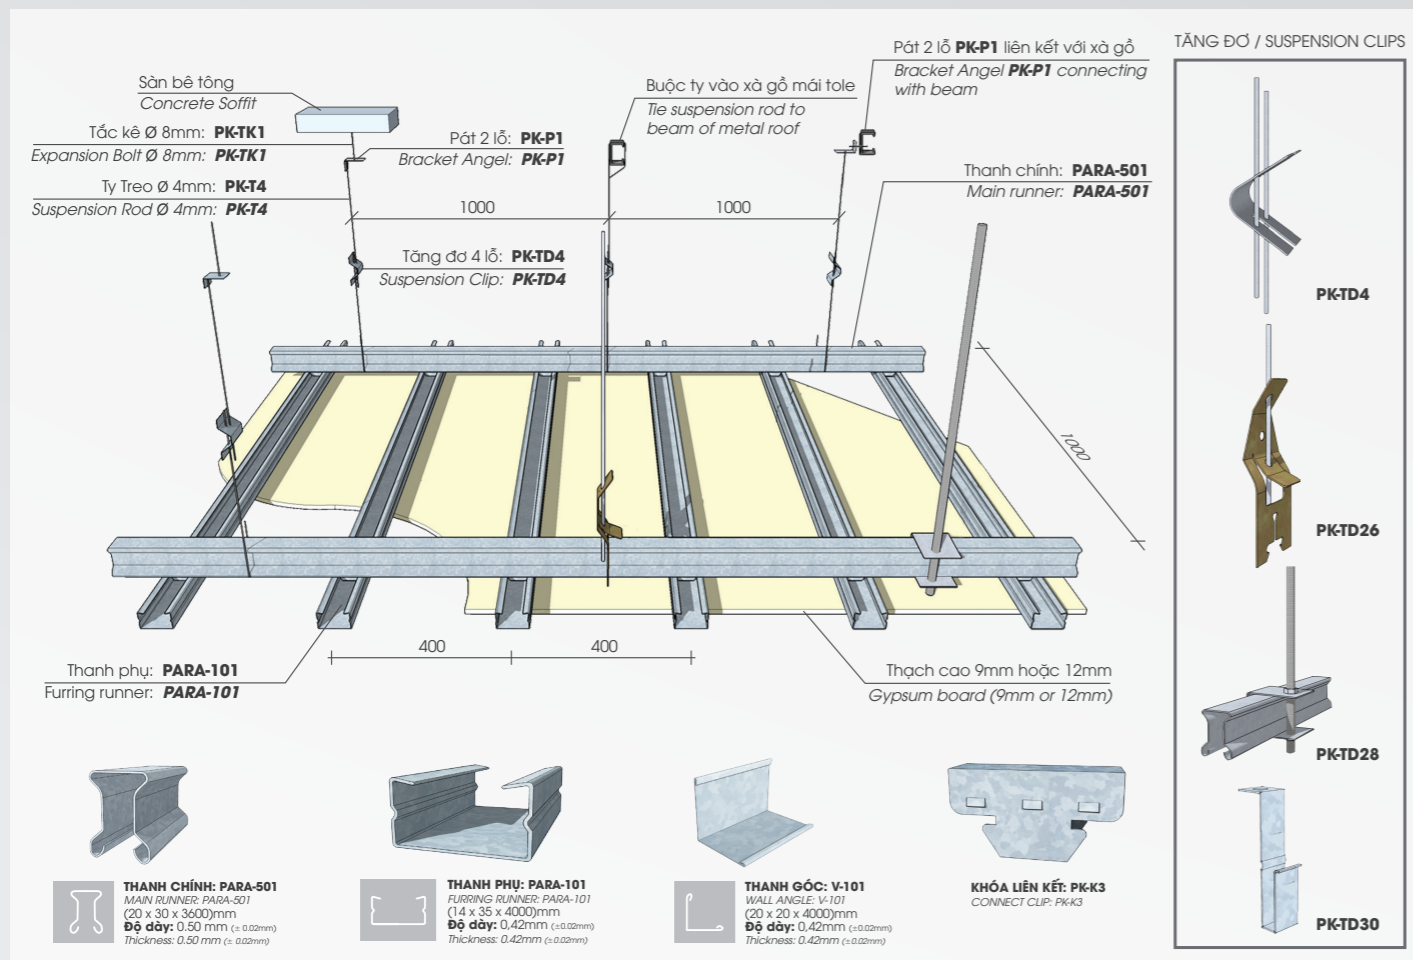

HƯỚNG DẪN LẮP ĐẶT

- Bước 1:** Định vị cao độ trần.
- Bước 2:** Lắp thanh góc theo cao độ trần.
- Bước 3:** Treo ty vào sàn bê tông hoặc xà gỗ với khoảng cách ≤ 1000 mm.
- Bước 4:** Lắp thanh chính vào ty treo.
- Bước 5:** Lắp thanh phụ vào thanh chính bằng khóa liên kết.
- Bước 6:** Điều chỉnh phẳng khung trần và lắp tấm. Khoảng cách vít ở biên tấm trần ≤ 200 mm và giữa tấm trần là ≤ 300 mm.
- Bước 7:** Dán băng keo lưới toàn bộ mối nối tấm trần.

INSTALLATION GUIDE

- Step 1:** Determine the height of the false ceiling.
- Step 2:** Install the wall angles at the height of the false ceiling.
- Step 3:** Hang the suspension rods from the concrete soffit or the beam, spacing ≤ 1000 mm.
- Step 4:** Install the main runners connecting with the suspension rods.
- Step 5:** Install the furring runners connecting with the main runners using connect clips.
- Step 6:** Adjust the height of ceiling frame and fix boards onto frame. The spacing between screws at the borders ≤ 200 mm; in the middle ≤ 300 mm.
- Step 7:** All joints to be applied with adhesive tapes.

